

Smart Board Orientation Points

- The setting choices include:
 - Quick (4 Points)
 - Standard (9 Points)
 - Wide (12 Points)
 - Fine (20 Points)
- In order to change the settings from the original choice to a different setting, follow the steps below.
 - Start
 - All Programs
 - Smart technologies
 - Smart Notebook
 - Welcome Center
 - Control Panel
 - Smart Hardware Settings
 - In the Dropdown Menu select Orientation/Alignment Settings
 - In the Radio Button select Fine (20 Points)
 - Apply
 - OK
- Press the two buttons (keyboard and mouse) on the front of the Smart Board at the same time.
- The new settings should now be displayed for orientation.